

# Bluetooth Keyboard User's Manual

## Application

Bluetooth keyboard for home entertainments, education training, meeting, speech, and projector  
iPAD, iPhone and external keyboard for Samsung Smart phone Windows/ Mac, set-top box, etc.

## Packing list:

|                         |   |
|-------------------------|---|
| Mini Bluetooth keyboard | 1 |
| User manual             | 1 |

## Features

QWERTY full keyboard layout  
Free switches among windows, ios, android  
Multi-touch touchpad and number pad  
Support multiple languages (to be customized)  
Bluetooth connection

## Specification

Power supply : 2×AAA battery  
Wireless distance : Max 10meters  
Dimension : 366.6X125X18.9mm/14.4\*4.9\*0.74  
Weight : 366g/13ounce

## System requirement

Windows

Mac OS

Android/iOS OS


Fn+ "ESC.....Delete" =  ..... 



Capslock indicator  
Bluetooth connection indicator  
Power volume indicator

Touchpad on/off  
touchpad

Battery Cover

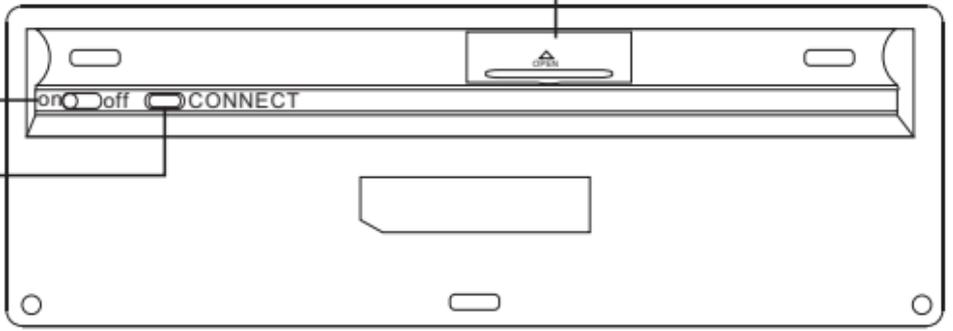

Power Switch

for Bluetooth connection

Fn+ " " = left mouse    Fn+ " " = right mouse    Fn+ " " = language switch  
Fn+ " " = for quick voice interface on devices with ios (specifically design for ios)

Power it on

1. Open the battery lid, put in the battery and make the power switch to position "On"
2. Connect it with another Bluetooth device
3. click the key "connect" on the keyboard to get it in Bluetooth connection status. ( the indicator will blink slowly)
4. Details:

Collect it with PC

Windows XP/2000

Firstly, please make sure the PC is Bluetooth enabled t, if not, a Bluetooth adapter is needed.

1. open the bluetooth communication software in a computer to make this computer in searching mode. Please refer to individual Bluetooth user manual, the following descriptions are just for reference.

(1) Open "control panel" and find the bluetooth icon, then right-click on it and select "open", and then click "Add" in the popping -up dialog box


(2) in the following pop-up dialog, select Bluetooth has been set up ,click to find other Bluetooth devices

(3) then turn on the keyboard (switch to position ON), and click "connect" to make the keyboard in auto Bluetooth searching mode.

(4) When the icon " iPazzPort Bluetooth " appears on the PC screen, select "next".


(5) Then, select " do not use the password" . When you see " Bluetooth is connected", the pairing process is complete.

Note: Please don't click the key " connect" in the back in the pairing process in case of unexpected disconnection

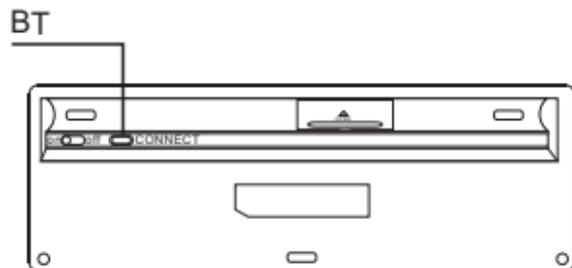


## Connect it with Android phone


- 1、 Switch on the keyboard (in the back) and click the key” connect” beside it for Bluetooth available status.
- 2、 On your phone, navigate to "setting" and activate the Bluetooth mode to search other Bluetooth device around
- 3、 Click the icon "iPazzPort Bluetooth" to next step.
- 4、 When the interface “Bluetooth pairing request” appears , input the the code on the screen and click "enter" to establish the Bluetooth connection.

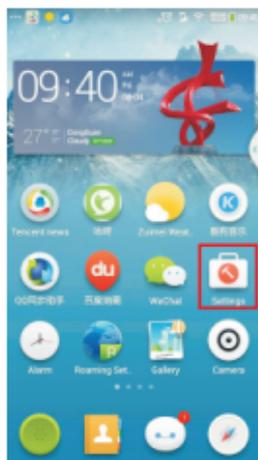


1、 Settings

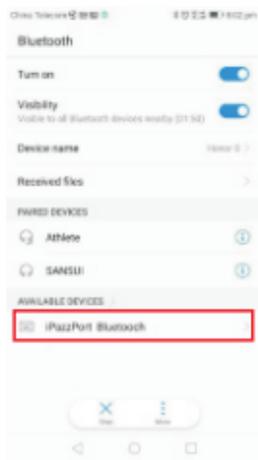

2、 Click “Bluetooth” and then “iPazzPort Bluetooth”

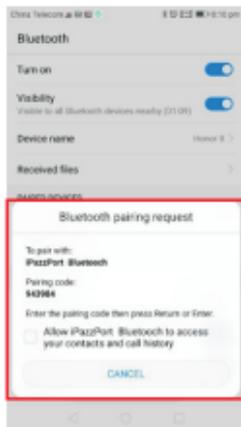

3、 Input the code and click “enter”

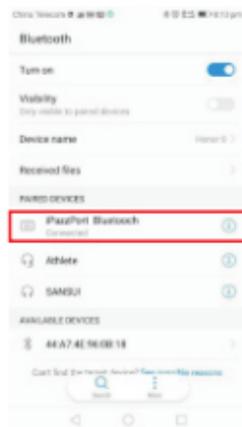


4、 Connected

The following is the steps to establish Bluetooth connection with iPhone, which is almost the same with that of the Android phone after you click the key" connect" in the back of the keyboard.




→ Bluetooth


Connect it with iPhone

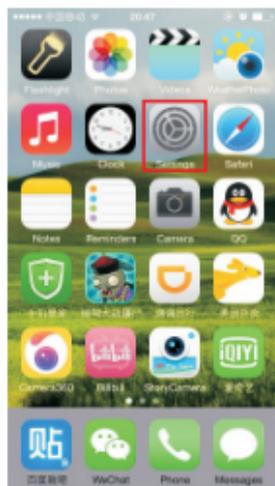


1、Settings

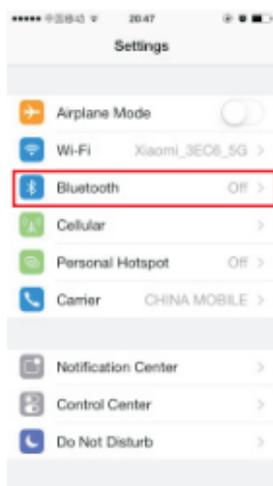

2 Click"Bluetooth" and then click "iPazzPort Bluetooth"

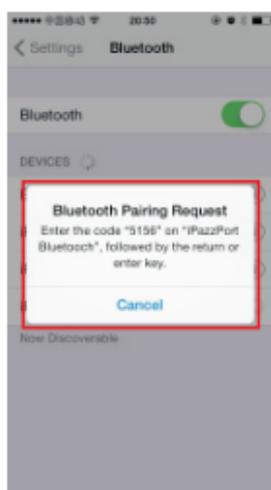

3、Input the code and click "Enter"

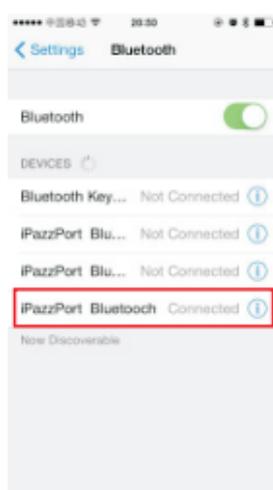

4、Connected

**Multi-touch application:**

the touchpad supports various gesture, the related gesture and function is described below:

| Touchpad Function                  | Mouse Function                   | Finger Gesture  | Finger Action   | Remark  |
|------------------------------------|----------------------------------|---|---|---|
| Moving                             | Move Cursor                      |  | Slide one finger on the touchpad                                    |   |
| right mouse                        | click the mouse wheel            |  | Tap the touchpad with two fingers simultaneously                    |   |
| Scroll with two fingers vertically | Scroll middle wheel of the mouse |  | Slide two finger vertically   | Zoom in or out the picture when view pictures |
| switches in pgaes                  | Switches in pages                |  | tap with three fingers simultaneously then slide to left/right side |   |